


Thank you for choosing the CorporateGiftPro Electric Wine Aerator and Decanter Gift Set!

COMPARTMENTS


Model No. MGS-KD-4


- 1. Dispense Button
- 2. Cover
- 3. Optional Aeration Switch
- 4. Aeration Inlet
- 5. Spout
- 6. Adjustable Tube
- 7. Display Stand

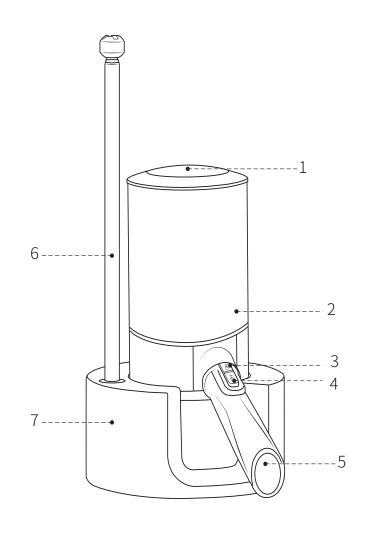


INSTALL THE BATTERY

- 1. Rotate the cover clockwise to unlock position and then remove it.
- 2. Insert 4 AAA batteries (not included) into the compartment, ensuring the '+' and '-' symbols on the batteries align with those on the device.
- 3. Rotate the cover counterclockwise to secure it in place.

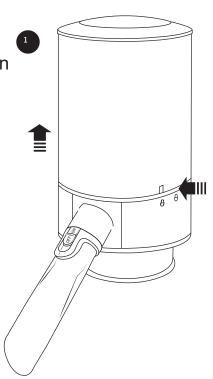


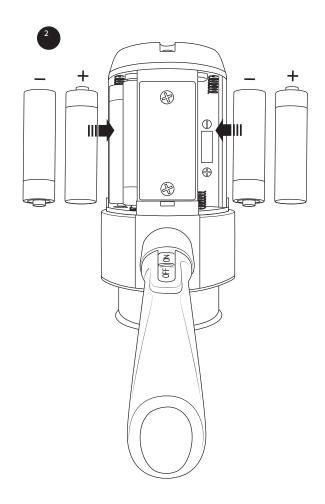

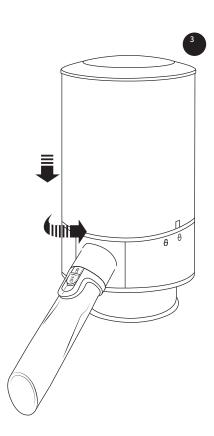


INSTALL THE DEVICE AND DISPENSING

- ·Securely attach the tube to the base nozzle of the device.
- ·Adjust the tube to the desired length.
- ·Securely fasten the device onto the wine bottle.
- ·If you prefer wine aeration during dispensing, turn ON the optional aeration switch.

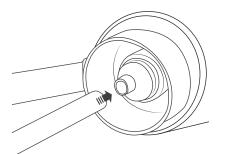



·Press and hold the button to dispense, release to stop.

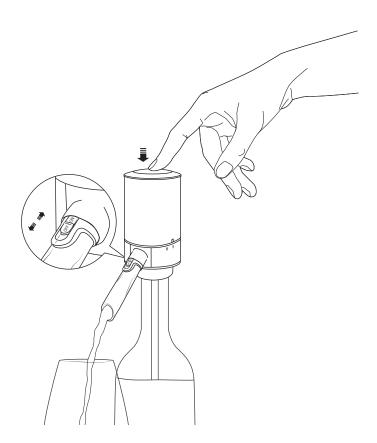

TROUBLESHOOTING TIPS

Case 1: If dispensing fails, confirm secure attachment to the bottle and a tight seal on the tube.

Case 2: This device suits wine bottles with an outer bottleneck diameter under 1.38 inches and an inner diameter between 0.7 and 0.75 inches.

Case 3: For less than 2 oz of remaining wine, remove the dispenser and pour directly from the bottle to prevent splashing caused by unstable pressure.

Case 4: If wine dispensing is below normal, it may be due to low battery. Please replace the batteries promptly.

Contact Us

Website: www.corporategiftpro.com Email: happy@corporategiftpro.com

Text & Call: (575)414-0883

TikTok Shop: CorporateGiftPro Amazon Store: CorporateGiftPro